BLOW THROUGH VALVE (ABSBOV - 27mm)



A blow off value is positioned towards the end of a pipe run, it allows dust to be blown out of the system, by attaching a compressed air line and opening the value.

Installation Instructions:

Use the correct solvent Plusbond 3019. Do not paint. Keep pipe clean and free from dust. Do not install in direct sunlight. Only install with approved pipe. Do not use solvents to clean, only soapy water.

PART NO.: PIPE COLOUR: **OPERATING TEMP:** INSIDE DIAMETER: ABSBOV - 27mm Red - 40 c to 70 c 27mm FITTINGS COLOUR: **DIAMETER TOLERANCE:** WALL THICKNESS: **OUTSIDE DIAMETER:** Red + / - 0.15mm 2mm 27mm



